

Lab 100 Student Panel

Reference Card

V1.0.250912



CALL TEACHER

Press to call teacher.

Press to enter a new Audio on Demand selection.

Bookmark number keys

- Set bookmarks
- Search for bookmarks
- Remove bookmarks
- Answer a Quiz question
- Dial a phone number
- Select/change a file in Audio-on-Demand

TRUE / FALSE

Press to answer a Quiz question.

STUDENT WORKSTATION NUMBER

MODE

To repeat a loop of audio between two Bookmarks hold down Mode and press the appropriate Bookmarks. To switch repeat off hold down the Mode key and press Clear.

VOLUME CONTROLS

Set the volume for the audio source and the student.

CLEAR

Press and hold this key down whilst pressing on a lit bookmark to remove .



Press **REW** to rewind the master and student track. Press twice to go directly to the beginning. Press during play to rewind slowly.

Press **FF** to fast-forward the master and student track. Press twice to go directly to the end. Press during play mode to wind forward slowly.

Press **STOP** to stop the playback and recordings.

Press **PLAY** to play the audio source.

Press **SPEAK** to play the master track and record to the student track.

Press **RECAP** to return to the beginning of the previous sentence on the master track.